



Where Do I Start?

Before you begin using your remote, complete the following initial setup tasks.

Install the Batteries

The remote requires two AA batteries (alkaline recommended). A diagram in the battery compartment of the remote indicates proper placement of the batteries. When batteries are properly installed, the light on the remote blinks each time a key is pressed.

Visit the Quick Reference Section

Use the Quick Reference section of this guide to familiarize yourself with the remote and the functions of its various keys. Knowing the function and location of the keys on the remote will assist you when you are programming the remote.

Program the Remote

To learn how to program your remote, refer to the sections **What Devices Can I Control**, **What Devices Do I Want to Control**, and **Program the Remote to Control My Devices** for further instructions.

Find a Place to Store Your Remote

Keeping up with one remote is much easier than keeping up with four or five remotes. However, it is still a good idea to find a storage location for your remote. The AT6400 is not a toy. It should be kept out of the reach of children under the age of 6 years.

Program the Remote to Control My Devices

Your remote is initially programmed to only operate your set-top. You will need to set up the remote to operate your other devices using its TV, DVD, and AUX modes. The TV key may be programmed to operate a standard or high-definition television (HDTV). The DVD key may be programmed to operate a DVD player. The AUX key may be programmed to operate a VCR, a receiver, an amplifier, or a Home Theater in a Box (HTIB) system. If the remote provides only limited functionality for a device, you can look for a code that provides more functionality.



AT6400 AllTouch IR Universal Remote Control

User Guide

Welcome to the Ultimate Control Experience

Your new AT6400 AllTouch® Infrared (IR) Universal Remote Control (remote) is a true universal remote, functioning as four remotes in one. As one example, you can use this remote to operate your set-top, your TV, and two other devices, such as a DVD player and VCR.

Important Information About Your Remote


Your remote is initially programmed to only operate your set-top. Therefore, you must program the remote to operate your TV, VCR, or other devices. See **Program the Remote to Control My Devices** to learn how to enter device codes and program your remote.

Note: You must use the IR remote within line of sight of the set-top to operate the set-top correctly.

How Does A Universal Remote Control Work?

You tell the remote which type of device you want to operate using the four keys arched across the top of the remote. These keys, known as **mode keys**, are labeled **STB**, **TV**, **DVD**, and **AUX**. Each mode key is associated with a specific device. As an example, after programming the remote, if you want the remote to operate your TV, you simply press the TV key. Other keys you press on the remote, thereafter, should operate your TV. Want to switch the remote to operate a different device? Just press the mode key for the next device you want to operate. In this guide, you will learn which types of devices you can control and how to program the remote to control your specific devices.

Quick Reference

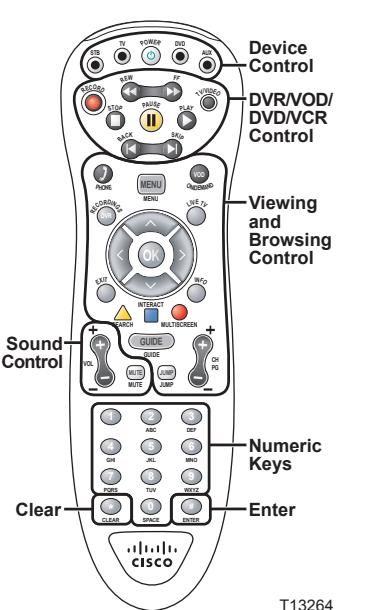

T13264

Device Control

- Turns devices on or off
- Enables set-top mode functions
- Enables TV mode functions
- Enables DVD mode functions
- Enables AUX mode functions

DVR, VOD, DVD, VCR Control

- Notes:**
- In STB mode, these keys control DVR and VOD functions.
 - In DVD and AUX modes, these keys may control your DVD or VCR depending on how you have programmed the remote.
- Records the selected program
 - Stops DVD, VCR, VOD, or DVR content
 - Pauses DVD, VCR, VOD, or DVR content
 - Plays DVD, VCR, VOD, or DVR content
 - Scrolls through available TV or video input sources
 - Rewinds or fast forwards through DVR or VOD content
 - Skips backward or forward through DVR or VOD content

T13264

What If None of the Codes Work?

If none of the codes listed for your brand of device operate the device correctly, or if your device is not listed in the codes table, you can use the Auto-Search function to search through the code library for a valid code. This section provides procedures for using the Auto-Search function to search the code library for TV, DVD and AUX mode codes.

Note: Read the procedures in this section thoroughly before beginning. You need to be prepared to observe the behavior of the remote.

Auto-Search Features

Consider the following items when using Auto-Search:

- The Auto-Search function begins searching from the first code.
- If a valid code is not found, the green backlight blinks twice and the remote returns to normal operation.
- If any other key is pressed except PLAY, ENTER, POWER, EXIT, REW, FF, or numeric keys 1 through 4 (when programming the AUX mode key), the mode key displays a long red flash (error message) and the remote returns to normal operation.
- Should the remote time-out before you complete the Auto-Search function you must start over. This is indicated by one long flash of the red LED.
- If the device is not listed and the Auto-Search function is unable to find a usable code, you may need to use the original remote provided with the device.

Notes:

- When an invalid code is entered, the selected mode key displays a long flash to indicate that you have not entered the code correctly.
- Should the remote time-out before you complete the code setup, you must start over. This is indicated by one long flash of the red LED.

6. Point the remote at the device, and press **POWER** to test the device.

7. Did the device power off?

- If yes, write this code number in the table found in this guide. You may need it again if the device code is accidentally erased.
- If no, repeat this procedure from step 3 using a different setup code.

Note: If none of the codes listed for your brand of device operate the device correctly, go to **What If None of the Codes Work** for instructions.

8. Repeat this procedure for each mode key you want to program.

Note: The device categories are number-coded to provide a more direct programming method.

Auto-Searching the Code Library for TV or DVD Mode Codes (Program Code 922)

1. Turn on the device that you want to assign to the AUX key.

2. Point the remote at the device.

3. Press and while holding the **AUX** key, press the **OK** key.

4. Release both the **AUX** key and the **OK** key and all the mode keys blink twice.

5. Enter the programming code **9 2 2** by pressing the numeric keys on the remote. The **AUX** key blinks twice indicating a successful entry.

6. Press the **PLAY** key, choose one of the following device categories and then, using the number keys on the remote, press its assigned number (1 – 4) based on the following list:

1 = VCRs 2 = Receiver/Tuners

3 = Amplifiers 4 = HTIB

Note: The device categories are number-coded to provide a more direct programming method.

Viewing and Browsing Control

- Accesses the phone menu
- Accesses the Interactive Program Guide (IPG)
- Accesses the On Demand menu
- Accesses the DVR list of recordings
- Views live TV
- Moves through selections
- Selects and deselects screen items
- Clears all menu screens and returns to broadcast TV

ENTER Enters and saves (stores) an entry

SEARCH Accesses the Search menu

INTERACT Accesses INTERACT content (Internet and interactive content)

MULTISCREEN Turns MultiScreen mode on or off

INFO Displays text information about the selected program

GUIDE Displays or closes the IPG

JUMP Jumps to next section or switches to last channel viewed

INFO Selects the next channel, up or down, when watching TV. Moves up or down one page in the IPG and in some menu screens

RECORD Starts recording

STOP Stops recording

PAUSE Pauses recording

PLAY Plays recording

RECORD Starts recording

STOP Stops recording

PAUSE Pauses recording

PLAY Plays recording

RECORD Starts recording

STOP Stops recording

PAUSE Pauses recording

PLAY Plays recording

RECORD Starts recording

STOP Stops recording

PAUSE Pauses recording

PLAY Plays recording

RECORD Starts recording

STOP Stops recording

PAUSE Pauses recording

PLAY Plays recording

RECORD Starts recording

STOP Stops recording

PAUSE Pauses recording

PLAY Plays recording

RECORD Starts recording

STOP Stops recording

PAUSE Pauses recording

PLAY Plays recording

RECORD Starts recording

STOP Stops recording

PAUSE Pauses recording

PLAY Plays recording

RECORD Starts recording

STOP Stops recording

PAUSE Pauses recording

PLAY Plays recording

RECORD Starts recording

STOP Stops recording

PAUSE Pauses recording

PLAY Plays recording

RECORD Starts recording

STOP Stops recording

PAUSE Pauses recording

PLAY Plays recording

RECORD Starts recording

STOP Stops recording

PAUSE Pauses recording

PLAY Plays recording

RECORD Starts recording

STOP Stops recording

PAUSE Pauses recording

PLAY Plays recording

RECORD Starts recording

STOP Stops recording

PAUSE Pauses recording

PLAY Plays recording

RECORD Starts recording

STOP Stops recording

PAUSE Pauses recording

PLAY Plays recording

RECORD Starts recording

STOP Stops recording

PAUSE Pauses recording

PLAY Plays recording

RECORD Starts recording

STOP Stops recording

PAUSE Pauses recording

PLAY Plays recording

RECORD Starts recording

STOP Stops recording

PAUSE Pauses recording

PLAY Plays recording

RECORD Starts recording

STOP Stops recording

PAUSE Pauses recording

PLAY Plays recording

RECORD Starts recording

STOP Stops recording

PAUSE Pauses recording

PLAY</

Put It Back the Way I Got It

You can return all advanced functions back to their original settings by resetting the remote to factory default settings. Resetting the remote to factory default settings removes all of the programming you have entered for the remote. You must reprogram the remote to restore your original settings.

Resetting the Remote to Factory Default Settings (Program Code 900)

1. Press and hold the **STB** mode key on the remote.
2. Without releasing the **STB** key, press and hold the **OK** key.
3. Release both keys and all mode keys blink twice.
4. Enter the programming code **9 0 0** by pressing the numeric keys on the remote. The **STB** mode key blinks four times to indicate you have successfully reset the remote to factory default settings.

Notes:

- If any other key is pressed except the numeric keys, the remote does not accept any changes or updates. The **STB** mode key displays a long red flash and the remote returns to normal operation.
- If the remote times out before you complete the factory default reset procedure, the remote does not accept any changes. You must start over from step 1 of this procedure.

Troubleshooting

If there is no response when you press the keys on the remote, please check the following items before calling for service.

Check the Batteries

- Are the batteries inserted correctly?
- Check the battery condition for leakage.
- Replace with new alkaline batteries.

Check the Device

- Is the device's power cord connected to the power outlet?
- Is the device switched on?

Check the IR Database Codes List

Is the device brand name for the device listed in the code list?

- If yes and there is more than one code listed, try using a different code to provide more functionality.
- If no, try the following:
 - Use the Auto-Search function to find a usable code.
 - If the Auto-Search function is unable to find a usable code, you may need to use the original remote provided with the device.

Code Tables

If the remote does not recognize your device, you can find codes for your device by brand name. Code tables in this section are organized by the devices assigned to each mode (TV, DVD, and AUX).

TV Mode Group

TV

Abex	1098
Admiral	1001, 1099
Advent	1005, 1053, 1110, 1113
Adventura	1100
Aiko	1015
Akwa	1034
Akai	1002, 1427
Alleron	1044
Amtron	1036
Anam National	1003, 1036
AOC	1004, 1005
Apex	1111, 1119, 1163, 1256
Audiovox	1036
Bang & Olufsen	1453
Belcor	1004
Bell & Howell	1001, 1045
Beng	1042
Bradford	1036
Broksonic	1114, 1121, 1382, 1383
Brokwood	1004
Cande	1004, 1007, 1100
Celebrity	1002
Citizen	1004, 1007, 1015, 1036, 1073, 1097, 1100
Coloryme	1004
Concerto	1004
Contec/Cony	1011, 1012, 1036
Craig	1036
Crosley	1000, 1053
Crown	1036, 1053
CTX	1257
Curtis Mathes	1000, 1004, 1014, 1045, 1073, 1097, 1385
CXC	1036
Cytron	1456
Daewoo	1004, 1005, 1013, 1015, 1016, 1097, 1106, 1258, 1362, 1368, 1369
Soundsdesign	1004, 1007, 1036, 1044
Squareview	1105
SSS	1036
Starline	1036
Supre-Macy	1100
Supreme	1002
Audiovox	1036
Bang & Olufsen	1453
Belcor	1004
Bell & Howell	1001, 1045
Beng	1042
Bradford	1036
Broksonic	1114, 1121, 1382, 1383
Brokwood	1004
Cande	1004, 1007, 1100
Celebrity	1002
Citizen	1004, 1007, 1015, 1036, 1073, 1097, 1100
Coloryme	1004
Concerto	1004
Contec/Cony	1011, 1012, 1036
Craig	1036
Crosley	1000, 1053
Crown	1036, 1053
CTX	1257
Curtis Mathes	1000, 1004, 1014, 1045, 1073, 1097, 1385
CXC	1036
Cytron	1456
Daewoo	1004, 1005, 1013, 1015, 1016, 1097, 1106, 1258, 1362, 1368, 1369
Soundsdesign	1004, 1007, 1036, 1044
Squareview	1105
SSS	1036
Starline	1036
Supre-Macy	1100
Supreme	1002
Audiovox	1036
Bang & Olufsen	1453
Belcor	1004
Bell & Howell	1001, 1045
Beng	1042
Bradford	1036
Broksonic	1114, 1121, 1382, 1383
Brokwood	1004
Cande	1004, 1007, 1100
Celebrity	1002
Citizen	1004, 1007, 1015, 1036, 1073, 1097, 1100
Coloryme	1004
Concerto	1004
Contec/Cony	1011, 1012, 1036
Craig	1036
Crosley	1000, 1053
Crown	1036, 1053
CTX	1257
Curtis Mathes	1000, 1004, 1014, 1045, 1073, 1097, 1385
CXC	1036
Cytron	1456
Daewoo	1004, 1005, 1013, 1015, 1016, 1097, 1106, 1258, 1362, 1368, 1369
Soundsdesign	1004, 1007, 1036, 1044
Squareview	1105
SSS	1036
Starline	1036
Supre-Macy	1100
Supreme	1002
Audiovox	1036
Bang & Olufsen	1453
Belcor	1004
Bell & Howell	1001, 1045
Beng	1042
Bradford	1036
Broksonic	1114, 1121, 1382, 1383
Brokwood	1004
Cande	1004, 1007, 1100
Celebrity	1002
Citizen	1004, 1007, 1015, 1036, 1073, 1097, 1100
Coloryme	1004
Concerto	1004
Contec/Cony	1011, 1012, 1036
Craig	1036
Crosley	1000, 1053
Crown	1036, 1053
CTX	1257
Curtis Mathes	1000, 1004, 1014, 1045, 1073, 1097, 1385
CXC	1036
Cytron	1456
Daewoo	1004, 1005, 1013, 1015, 1016, 1097, 1106, 1258, 1362, 1368, 1369
Soundsdesign	1004, 1007, 1036, 1044
Squareview	1105
SSS	1036
Starline	1036
Supre-Macy	1100
Supreme	1002
Audiovox	1036
Bang & Olufsen	1453
Belcor	1004
Bell & Howell	1001, 1045
Beng	1042
Bradford	1036
Broksonic	1114, 1121, 1382, 1383
Brokwood	1004
Cande	1004, 1007, 1100
Celebrity	1002
Citizen	1004, 1007, 1015, 1036, 1073, 1097, 1100
Coloryme	1004
Concerto	1004
Contec/Cony	1011, 1012, 1036
Craig	1036
Crosley	1000, 1053
Crown	1036, 1053
CTX	1257
Curtis Mathes	1000, 1004, 1014, 1045, 1073, 1097, 1385
CXC	1036
Cytron	1456
Daewoo	1004, 1005, 1013, 1015, 1016, 1097, 1106, 1258, 1362, 1368, 1369
Soundsdesign	1004, 1007, 1036, 1044
Squareview	1105
SSS	1036
Starline	1036
Supre-Macy	1100
Supreme	1002
Audiovox	1036
Bang & Olufsen	1453
Belcor	1004
Bell & Howell	1001, 1045
Beng	1042
Bradford	1036
Broksonic	1114, 1121, 1382, 1383
Brokwood	1004
Cande	1004, 1007, 1100
Celebrity	1002
Citizen	1004, 1007, 1015, 1036, 1073, 1097, 1100
Coloryme	1004
Concerto	1004
Contec/Cony	1011, 1012, 1036
Craig	1036
Crosley	1000, 1053
Crown	1036, 1053
CTX	1257
Curtis Mathes	1000, 1004, 1014, 1045, 1073, 1097, 1385
CXC	1036
Cytron	1456
Daewoo	1004, 1005, 1013, 1015, 1016, 1097, 1106, 1258, 1362, 1368, 1369
Soundsdesign	1004, 1007, 1036, 1044
Squareview	1105
SSS	1036
Starline	1036
Supre-Macy	1100
Supreme	1002
Audiovox	1036
Bang & Olufsen	1453
Belcor	1004
Bell & Howell	1001, 1045
Beng	1042
Bradford	1036
Broksonic	1114, 1121, 1382, 1383
Brokwood	1004
Cande	1004, 1007, 1100
Celebrity	1002
Citizen	1004, 1007, 1015, 1036, 1073, 1097, 1100
Coloryme	1004
Concerto	1004
Contec/Cony	1011, 1012, 1036
Craig	1036
Crosley	1000, 1053
Crown	1036, 1053
CTX	1257
Curtis Mathes	1000, 1004, 1014, 1045, 1073, 1097, 1385
CXC	1036
Cytron	1456
Daewoo	1004, 1005, 1013, 1015, 1016, 1097, 1106, 1258, 1362, 1368, 1369
Soundsdesign	1004, 1007, 1036, 1044
Squareview	1105
SSS	1036
Starline	1036
Supre-Macy	1100
Supreme	1002
Audiovox	1036
Bang & Olufsen	1453
Belcor	1004
Bell & Howell	1001, 1045
Beng	1042
Bradford	1036
Broksonic	1114, 1121, 1382, 1383
Brokwood	1004
Cande	1004, 1007, 1100
Celebrity	1002
Citizen	1004, 1007, 1015, 1036, 1073, 1097, 1100
Coloryme	1004
Concerto	1004
Contec/Cony	1011, 1012, 1036
Craig	1036
Crosley	1000, 1053
Crown	1036, 1053
CTX	1257
Curtis Mathes	1000, 1004, 1014, 1045, 1073, 1097, 1385
CXC	1036
C	